


# Control4

Alexa Entertainment Experience

Upgrade Guide

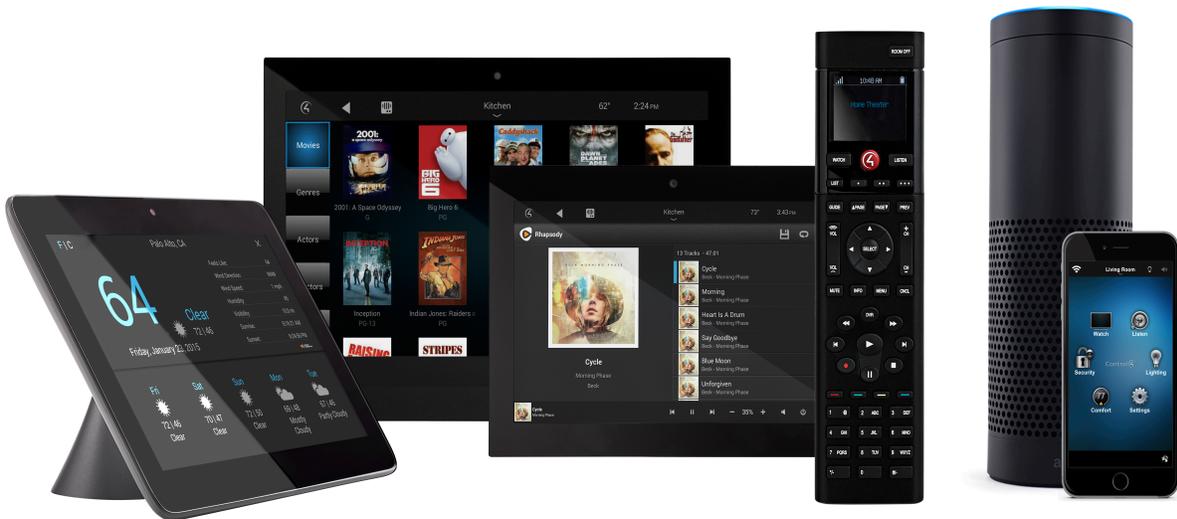

<b>Alexa Entertainment Experience Upgrade Guide .....</b>	<b>3</b>
<b>Other new features in the Control4 Smart Home skill .....</b>	<b>7</b>
<b>More help with your Amazon Alexa integration .....</b>	<b>7</b>


# Alexa Entertainment Experience Upgrade Guide

To upgrade your Alexa Control4 Smart Home skill to be able to use the entertainment controls—including selecting video devices, room commands like play, pause, and stop, and volume controls—follow these steps:

1. Log into your [customer.control4.com](https://customer.control4.com) account, and in the **Automation > Amazon Alexa** page, select the **Upgrade** button in the Room Audio section.




2. The *Alexa Entertainment Upgrade Experience* screen will appear and select **Next** to continue with the upgrade (or select **Cancel** to upgrade another time or leave the Alexa integration as it is).

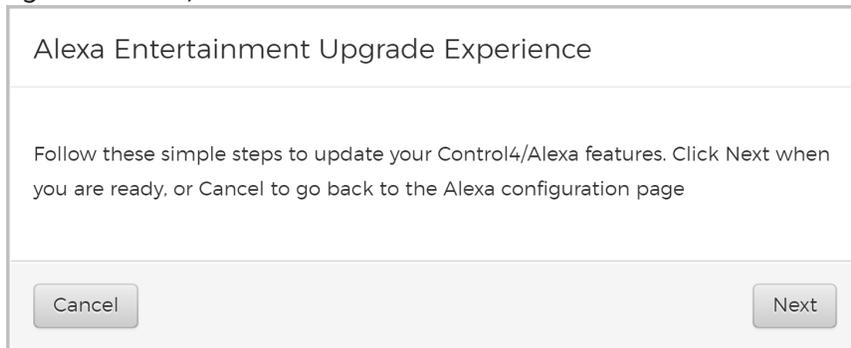


## Alexa Entertainment Experience Upgrade Guide


3. Following the instructions in Step 1 of the process, open a new browser window to <https://alexa.amazon.com>.

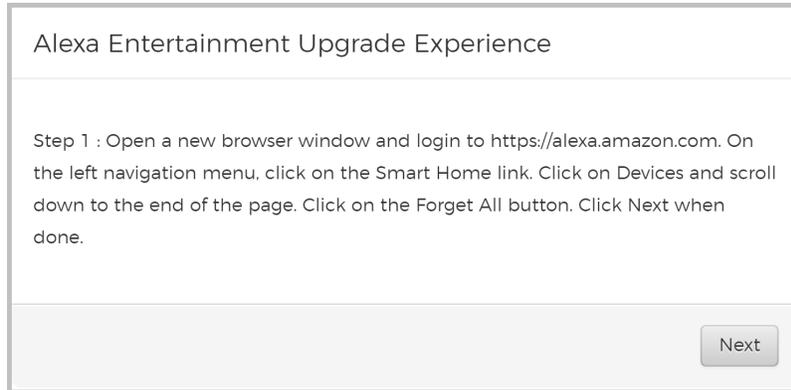

In the *Smart Home* section, select **Devices** and scroll to the bottom of the page. Select the **Forget All** button.

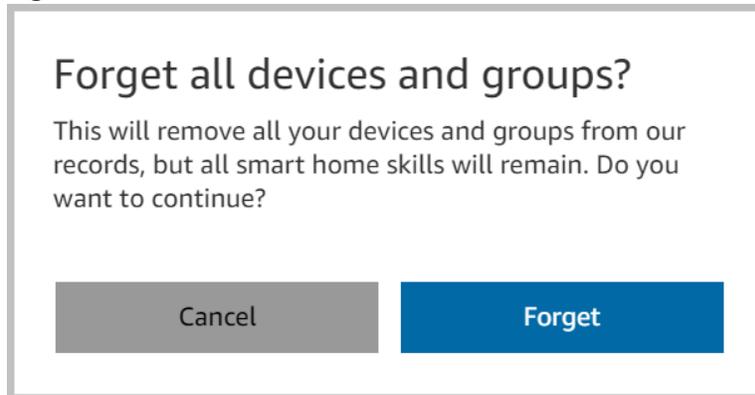


Return to the upgrade experience window, and click **Next** when done with Step 1.

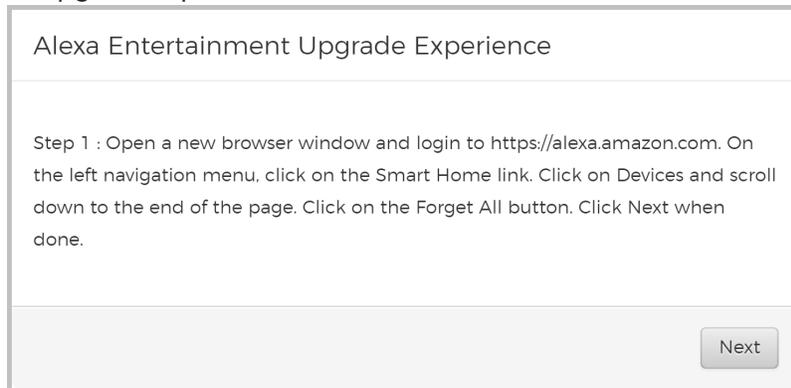


## Alexa Entertainment Experience Upgrade Guide


- In Step 2 of the Upgrade Experience, in the **Amazon Alexa > Smart Home > Devices** window you opened earlier, select **Discover**.

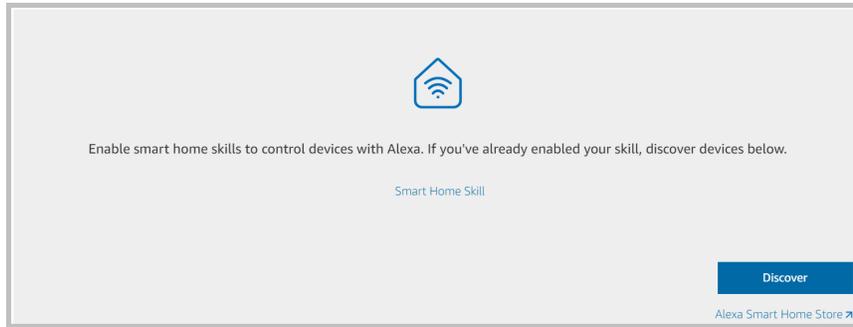

- Select **Next** in the Upgrade Experience window.

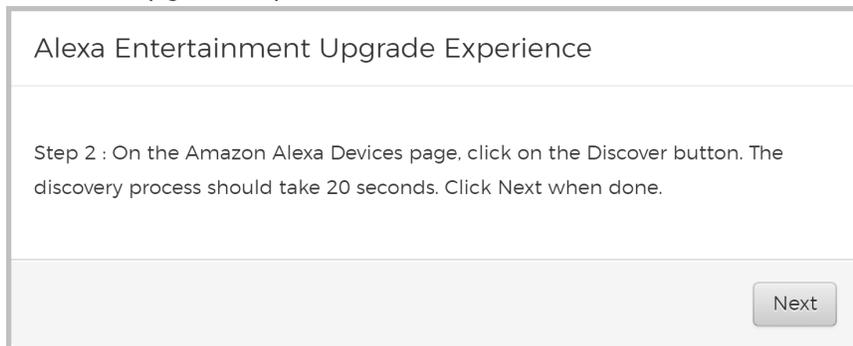

- In the Upgrade Experience window, click **Finish** in to close the Upgrade Experience and go back to the Amazon Alexa Configuration page.

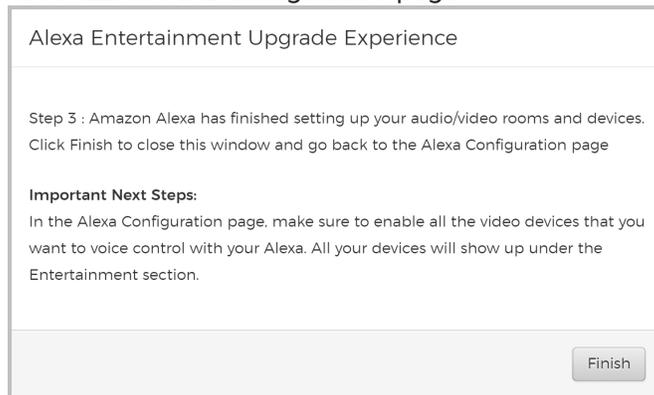

## Alexa Entertainment Experience Upgrade Guide

- In your [customer.control4.com](https://customer.control4.com) account, new devices to control now show up. Under *Entertainment*, **Enable** the rooms and video devices you want to control with Alexa, select **Save**, and instruct Alexa to discover devices, "**Alexa, discover devices.**"


Devices		Enabled	Room
		<input checked="" type="checkbox"/>	
Family Room Airplay		<input checked="" type="checkbox"/>	Family Room
Family Room Bluetooth		<input checked="" type="checkbox"/>	Family Room
Family Room Cable		<input checked="" type="checkbox"/>	Family Room
Family Room Network		<input checked="" type="checkbox"/>	Family Room
Family Room Receiver		<input checked="" type="checkbox"/>	Family Room
Family Room Sony Entertainment Network		<input checked="" type="checkbox"/>	Family Room
Family Room Television		<input checked="" type="checkbox"/>	Family Room
Family Room USB		<input checked="" type="checkbox"/>	Family Room

SUCCESS: Please instruct Alexa to discover changes by announcing "Alexa, discover devices." ×

- To view a full list of available voice commands, including video device control, select **View Voice Commands**.

# Other new features in the Control4 Smart Home skill

In your list of devices, note that *Lighting Scenes* and *Voice Scenes* (if configured by your dealer) are separated into different categories.

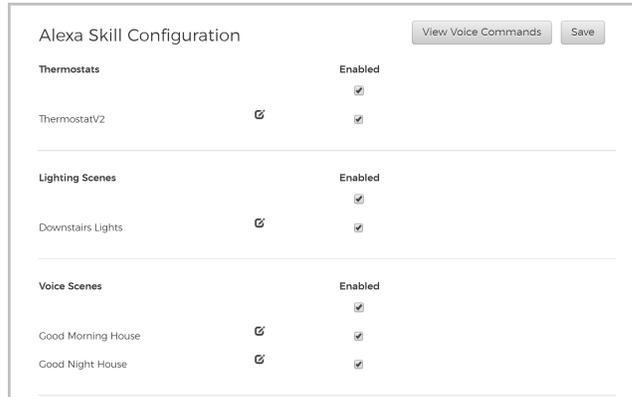

The upgraded Control4 Smart Home skill for Amazon Alexa also controls your locks and fans.

Examples:

"Alexa, what is the status of the Front Door?"

"Alexa, lock the Front Door."

"Alexa, turn on the Living Room fan."

## More help with your Amazon Alexa integration

For more help with your Amazon Alexa integration, go to <http://ctrl4.co/alexa-help>.